




EMPLAIS SUPER RAPIDO, FAST-DRY POWDER PRODUCT FOR PLASTERING.

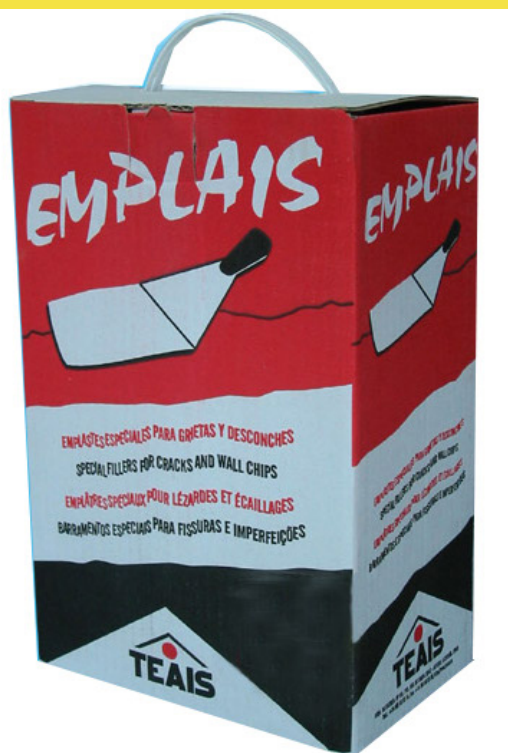

Descripción

White powder product that mixed with water becomes in a plastic blend suitable for plasting cracks and scalings in walls and floors.

Aplication

For removing unevenness on the surfaces to paint on only for interiors, On the plastering levelling. For removing cracks. In all works where a fast finish is required.

Surface preparation

The surface must be clean and perfectly dry, free of greases, saltpeter and dust, compact and without loose parts.

Modes of application

Mix with water until obtain the properly blend to be applied easily.
Apply by trowel or spatula obtaining a thin coat. All the blend must be applied before 10 minutes.
Once the application is dry, seal it with TEAIS paint, the only compatible.
For painting on the plaster, wait 15 minutes to do it since the last application.



📍 Avda. da Enerxía, nº 153, Pol. Ind. de Sabón
15143 Arteixo, A Coruña
☎ Telf.: 981 602 111
📠 Fax.: 981 601 508
✉ Email: desarrollo@teais.es

síguenos en:



Clean up

With plenty of water.

Data sheet

Water absorption $45 \pm 3\%$

Powder density $0,65 \text{ g/cc.} \pm 0,05$

Mass of density $0,65 \text{ g/cc.} \pm 0,05$

Open time

Colour/s White

Performance

1 sqm per kg in layer of 1 mm.

Storage

2 years in their original packages, tightly closed and protected from the weather.

Security



Indications of danger:

H315: H315: Causes skin irritation.

H317: H317: May cause an allergic skin reaction.

H318: H318: Causes serious eye damage.

H335: H335: May cause respiratory irritation.

Prudence advice:

P271: P271: Use only outdoors or in a well-ventilated area.

P280: P280: Wear protective gloves/protective clothing/eye protection/face protection.

P302+P352: P302+P352: IF ON SKIN: Wash with plenty of soap and water.

P304+P340: P304+P340: IF INHALED: Remove victim to fresh air and keep at rest in a position comfortable for breathing.

P305+P351+P338: P305+P351+P338: IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.

P310: P310: Immediately call a POISON CENTER or doctor/physician.

P403+P233: P403+P233: Store in a well-ventilated place. Keep container tightly closed.

P501: P501: Dispose of contents/container in accordance with local/regional/national/international regulation



📍 Avda. da Enerxía, nº 153, Pol. Ind. de Sabón
15143 Arteixo, A Coruña
☎ Telf.: 981 602 111
📠 Fax.: 981 601 508
✉ Email: desarrollo@teais.es

síguenos en:

