




# EMPLAIS INTERIORES SUPER, POWDER PRODUCT FOR PLASTER OF STANDARD CURING

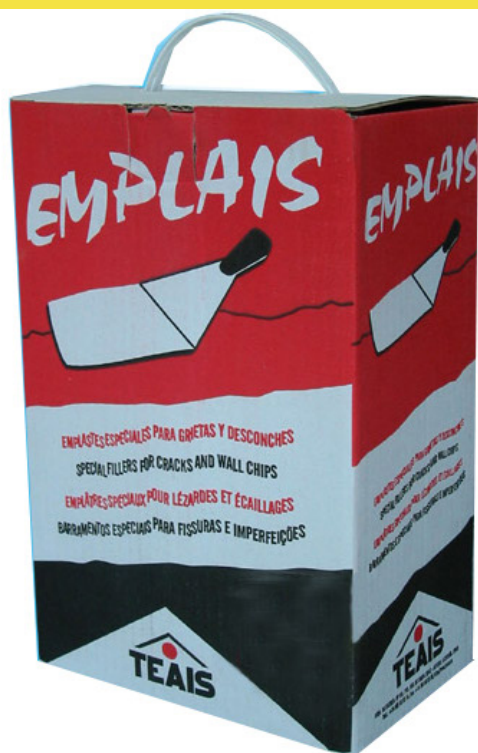

## Descripción

White powder product that mixed with water becomes in a plastic blend suitable for plastering cracks and scalings in walls and floors.

## Aplication

For removing unevennesses on surfaces to paint only for interiors. In plaster levelling. For removing cracks and fissures.

## Surface preparation

The surface must be clean and perfectly dry, free of grease, saltpeper being compact and without loose parts.

## Modes of application

Mix wit water until obtain the properly plastic blend to applied it easily.

Apply by a trowel without teeth or spatula in a thin layer.

Once the application is dry seal it with TEAIS, the only compatible.



📍 Avda. da Enerxía, nº 153, Pol. Ind. de Sabón  
15143 Arteixo, A Coruña  
☎ Telf.: 981 602 111  
📠 Fax.: 981 601 508  
✉ Email: [desarrollo@teais.es](mailto:desarrollo@teais.es)

síguenos en:



## Clean up

With plenty of water.

## Data sheet

Water absorption  $40 \pm 3\%$

Powder density  $0,650 \pm 0,05$  g/cc.

Mass of density  $1,650 \pm 0,05$  g/cc.

Water retention  $> 97\%$

Capillarity  $< 1,5\%$  60 minutes

Colour/s White

Curing density  $1,600 \pm 0,05$  g/cc.

## Performance

1 sqm per kg in layer of 1 mm.

## Storage

2 years in their original packages, tightly closed and protected from the weather.

## Security



## Indications of danger:

H315: H315: Causes skin irritation.

H317: H317: May cause an allergic skin reaction.

H318: H318:Causes serious eye damage.

H335: H335:May cause respiratory irritation.

## Prudence advice:

---

P271: P271:Use only outdoors or in a well-ventilated area.

P280: P280:Wear protective gloves/protective clothing/eye protection/face protection.

P302+P352: P302+P352:EIF ON SKIN: Wash with plenty of soap and water.

P304+P340: P304+P340:IF INHALED: Remove victim to fresh air and keep at rest in a position comfortable for breathing.

P305+P351+P338: P305+P351+P338:IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.

P310: P310:Immediately call a POISON CENTER or doctor/physician.

P403+P233: P403+P233:Store in a well-ventilated place. Keep container tightly closed.

P501: P501:Dispose of contents/container in accordance with local/regional/national/international regulation



📍 Avda. da Enerxía, nº 153, Pol. Ind. de Sabón  
15143 Arteixo, A Coruña  
☎ Telf.: 981 602 111  
📠 Fax.: 981 601 508  
✉ Email: [desarrollo@teis.es](mailto:desarrollo@teis.es)

síguenos en:

